

INSTALLATION INSTRUCTIONS



1822 - TO SUIT TOYOTA RAV4 3 DOOR 07/2000 to 01/2006

PLEASE READ INSTRUCTIONS THROUGH BEFORE YOU BEGIN

WARNING:

1. Do not, drill, cut weld or otherwise modify the towbar.
2. If you are using electric welding on a motor vehicle, **always** check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could **destroy** any onboard computers. If in doubt, check with the vehicle's manufacturer.


1. Ensure all hardware items have been included.
2. Remove and discard shipping hook and bolts from passenger side.
3. Lift towbar up into position. Insert loose plate in between towbar and chassis, fit four M12x35 bolts 1.25 pitch, spring washers and flat washers as per diagram.
4. Tighten all bolts to torque listing below.
5. Refer to diagram for correct positioning of lug, (lug to be facing downwards).
6. Towbar rating sticker to be conspicuously located on inside rear end of the driver's door. (see diagram below)

RECOMMENDED ASSEMBLY TORQUE LISTING

<u>Diameter</u>	<u>Grade 8.8 Bolt</u>
	Nm
M6	9.5
M8	21.7
M10	43.4
M12	77.3
M16	189.8

FOR TOWING PURPOSES ONLY

For towing capacity details please refer to vehicle owner's manual or to the manufacturer. Overloading can void your warranties

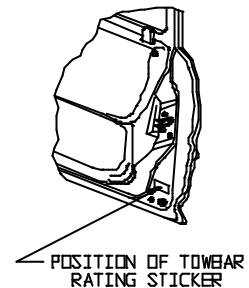

NOTE: Hayman Reese recommends that you check your towball to ensure it complies with the Australian standard AS 4177.2.

PLEASE NOTE: It is advised to remove lug from tow bar when not actually towing so as to produce a clear view of the vehicles registration plate if obscured, and to also provide increased departure angle

1822 - TO SUIT TOYOTA RAV4 3 DOOR 07/2000 to 01/2006

